



# ASSEMBLY - EXO FOR CHROMEBOOKS


## 1 Bottom Case

Open the device, placing the bottom part of the device at about a 45 degree angle into the bottom edge of the case.




## 2 Bottom - Press in Keyboard

With the device in an upright position, press the sides of the keyboard down into the case until securely attached. Press the back corners of the case to ensure it is securely attached.

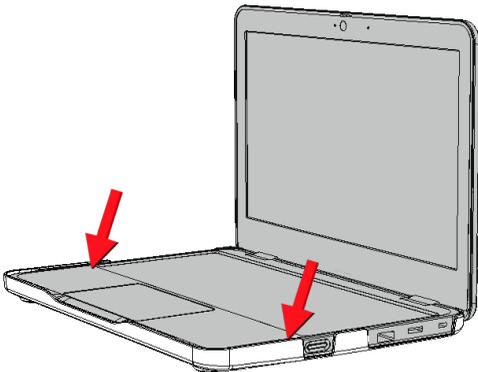


## 3 Top Case

Align the top device edge with the top case edges where the angled material starts. Using your fingers, slide the case down, onto the device.

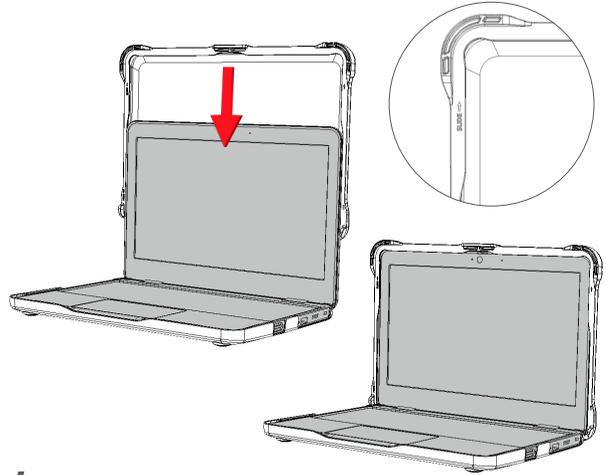

## 4 Top Case - Back Spine

Close the device. Working from the left, push the left corner of the case onto the device, push the middle of the spine, and lastly, push the right corner onto the device.

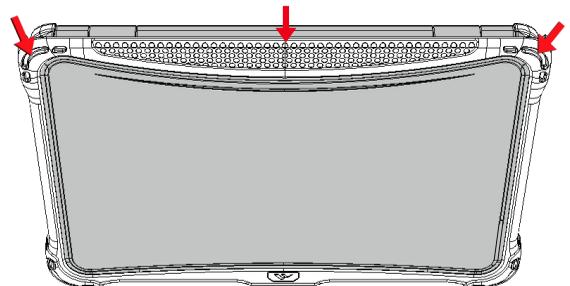




# REMOVAL - EXO FOR CHROMEBOOKS


## 1 Top Case - Back Spine

With the device closed, pull the back corners and back edge of the case off the device. Ensure that the whole back edge has been lifted from the device.

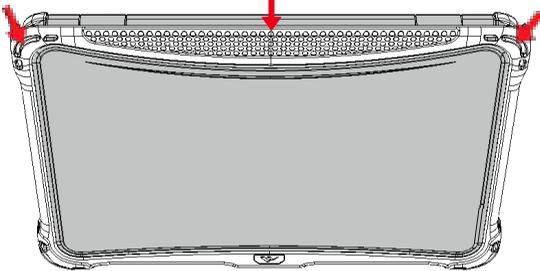

## 2 Top Case - Slide Off

Open the device, keeping one hand on the bottom part of the device and one hand to pull the top case. Holding the case by the middle lifter tab, slide the case off the device.

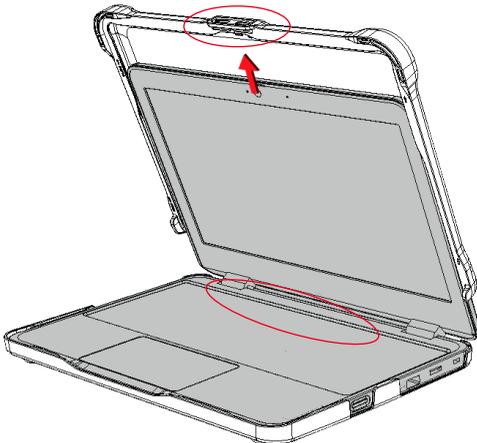

### **CRITICAL!**

The monitor must be SLID out of the case. Failure to do so through forcefully popping/pressing the monitor out may cause damage to the device.

## 3 Bottom Case

With the device open, use your fingers to push the back corner clips off of the device. Continue using your fingers, pushing the side clips off the device.

