


START


1 Insert iPad into case. Make sure ports align with case cutouts.



2 If using optional overlay, peel off protective film from both sides.

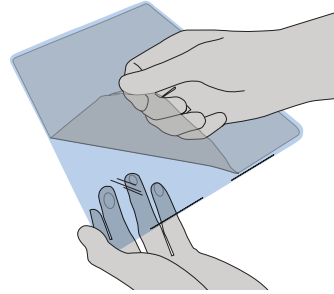

3 Place overlay and bezel over iPad. Align home button. Ensure TOP side of the overlay is oriented UP.

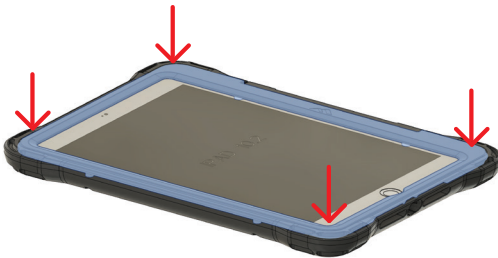

4 Massage along perimeter to press the cover into the case.



5 Use included hex tool to tighten 4 screws by rotating clockwise until snug. DO NOT over tighten.

Optional Shoulder Strap



See detailed instructions on the product page.