




Installation

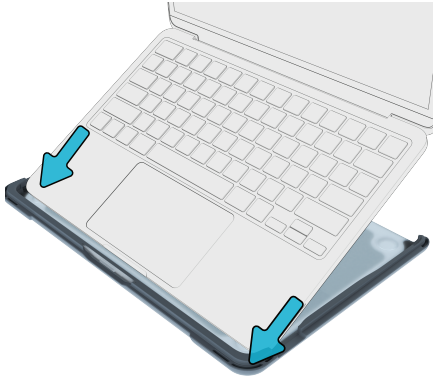


- 1** Align the device keyboard under the bottom case front clips on both sides.

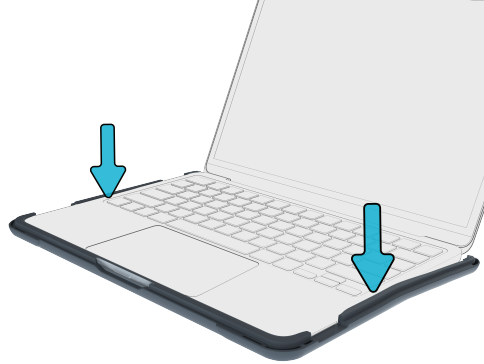

- 2** Pop in device ensuring side clips engage.

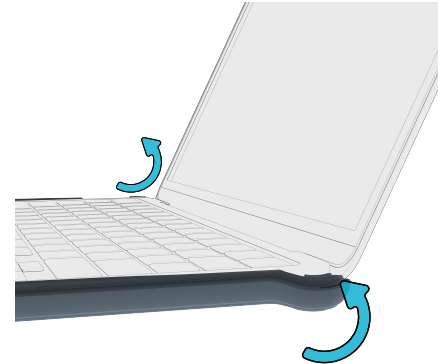


- 3** Carefully press the rear corner clips to snap onto the keyboard.

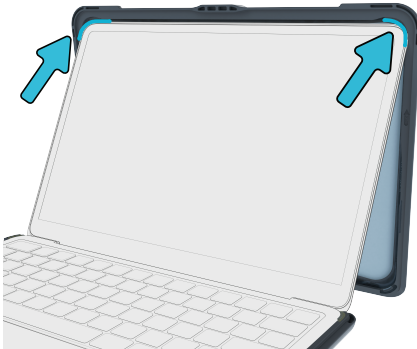

- 4** Position the device beneath the top case's retention hood.



- 5** Pivot case until it engages side snaps.

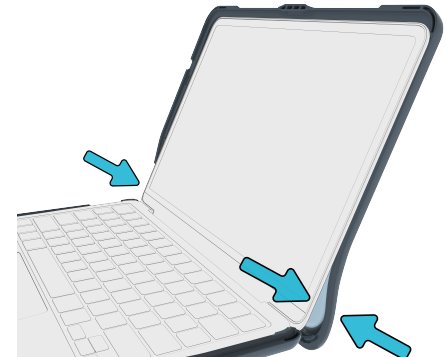


- 6** Press the lower side clips over the device, with pressure from both sides, to snap into place securely.

Removal


Critical!

Follow steps 1 and 2 in order.


Failure to do so may result in damage to device.

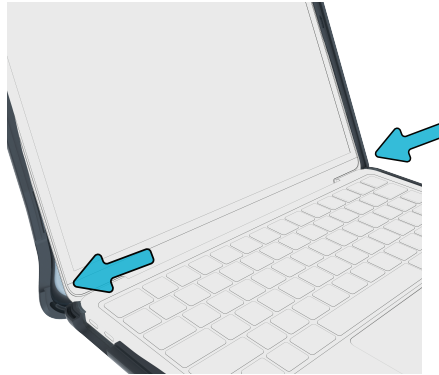


- 1** Push the lower left and right side clips outward to the bottom of the top case from the device.

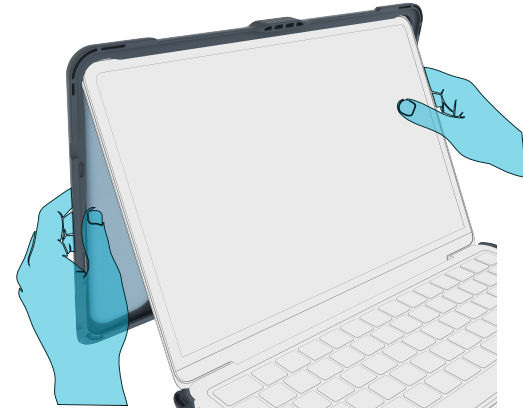

- 2** Rotate the case off the device from the bottom after releasing the clips.

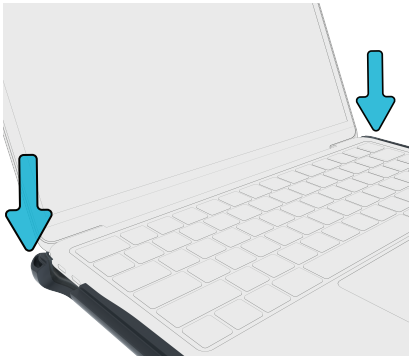

- 3** Gently push the rear clips down to unhook from the device.

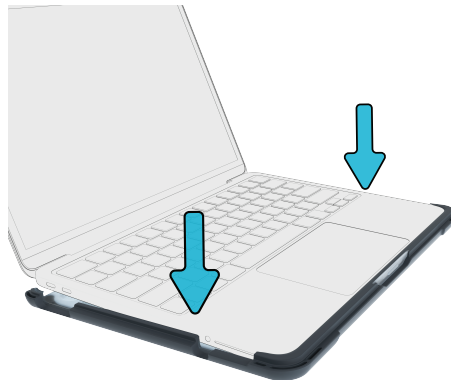

- 4** Push the left and right side clips down past the device, one side at a time, to release it from the bottom case.